

 
345 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440
or visit us at http://lech.napcosecurity.com/
(Note: Technical Service is for security professionals only)
Publicly traded on NASDAQ Symbol: NSSC

Cylinder Adapter Kits Installation Guide


© ALARM LOCK 2019 WI1163FLF 10/19

To replace a specific cylinder, a specific *Cylinder Adapter Kit* is required. The kit includes: Cylinder Collars, Cylinder Adapter, IC or Standard Tailpiece, Plastic Rings, mounting screws, Washer and Wave Washer. *Kit does* <u>NOT</u> *include the cylinder*. **Note:** When ordering kit, specify the finish at the end of the Part #. For example, **ET-ARIC/US3**.


ATTENTION: WHEN INSTALLING THE ADAPTER KIT, BE SURE TO REPLACE THE ORIGINAL TAILPIECE WITH THE TAILPIECE INCLUDED IN THE KIT. IN ADDITION, BE SURE TO REPLACE ANY GREASE THAT WAS REMOVED DURING THE INSTALLATION.





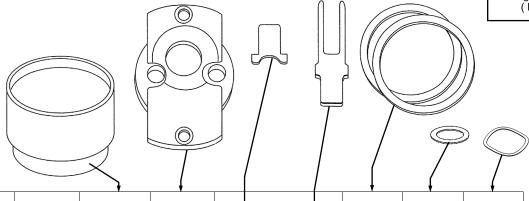

Kit Description	Part #	Cylinder Collar(s)	Cylinder Adapter	Tailpiece		Plastic	Washer	Wave
				Std	IC	Rings	**asiici	Washer
Arrow 6 & 7 pin I.C.	ET-ARIC	HW1098 HW1077	HW1066		HW1062	HW1099		WA200
Arrow Standard	ET-AR	HW980	HW1066	HW1053		HW1099		WA200
Assa Standard	ET-AS	HW980	HW1069	HW1054		HW1099		WA200
Alarm Lock Standard	ET-AL	HW980	HW1007	HW971		HW573		WA200
BEST 6 & 7 PIN I.C.	ET-BIC	HW1098 HW1077	HW1065		HW1062	HW1099		WA200
Corbin I.C.	ET-CIC	HW980	HW1067		HW1061	HW1099		WA200
Corbin Standard	ET-C	HW1077	HW1067	HW1055				WA200
Medico 6 & 7 Pin I.C.	ET-MIC	HW1051	HW1063		HW971	HW1099	WA171	WA200
Medico Standard	ET-M	HW1051	HW1069	HW1056		HW1099		WA200
Sargent I.C. Small / Large Format Core	ET-RIC	HW2145 HW1051	HW1066		HW1080	HW1099		WA200
Sargent Standard	ET-R	HW980	HW1066	HW971		HW1099		WA200
Schlage I.C.	ET-SIC	HW1098	HW1063		HW1060 (see image above)	HW1099	HW830	WA200
Schlage Standard	ET-S	HW980	HW1007	HW1057				WA200
Yale 6 & 7 Pin I.C.	ET-YIC	HW1098 HW1151	HW1063		HW1059	HW573	WA160	WA200
Yale Standard	ET-Y	HW1077	HW1063	HW1058				WA200

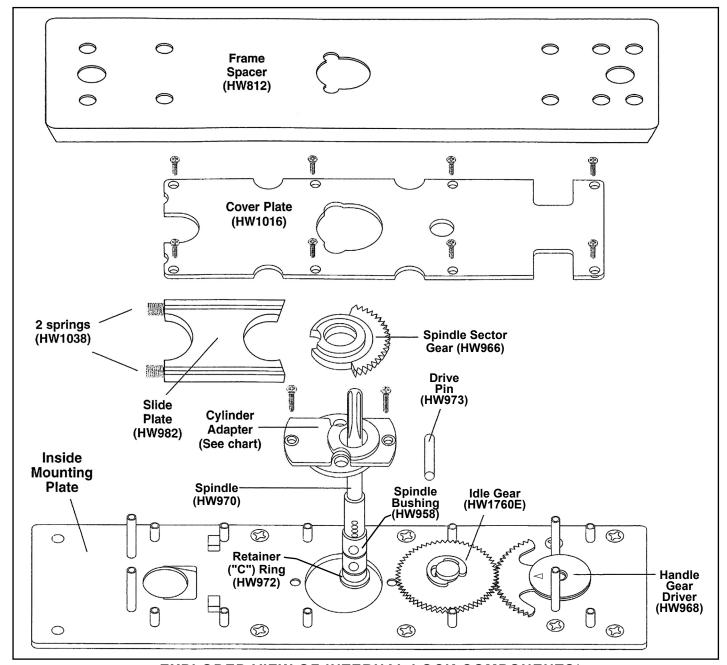

EXPLODED VIEW OF INTERNAL LOCK COMPONENTS*

*Alarm Lock Limited Warranty is printed in the original installation instructions (available for download at http://tech.napcosecurity.com/)

TO REPLACE THE CYLINDER ADAPTER:


1. Remove the Frame Spacer.



2. Remove screws necessary to unfasten and remove the **Cover Plate**.




3. Remove **Slide Plate** (Careful! 2 springs may pop out).

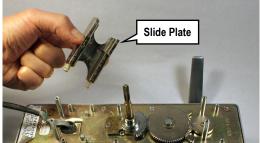


Use screwdriver to carefully pry up and remove Spindle Sector Gear.




5. Remove **Drive Pin** from **Spindle Bushing**.

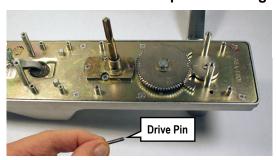

6. Remove the "C" **Retainer Ring** from the base of the **Spindle Bushing**.

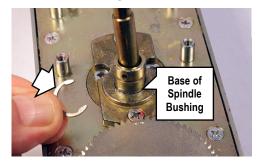

Remove four screws: Two screws to disengage the Cylinder Adapter, and two screws to detach the factory cylinder.

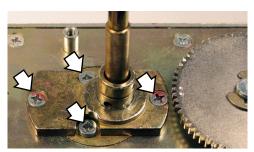

8. <u>Push</u> the **Spindle/Spindle Bushing** assembly out of the factory **Cylinder Adapter** to separate.




Set aside the factory **Cylinder Adapter**, factory **Cylinder Collar** and the factory cylinder. Install the new cylinder using all necessary parts included in the *Cylinder Adapter Kit* (see chart on page 1), as follows:

New Cylinder Installation

8. Insert the **Spindle/Spindle Bushing** assembly into the bottom of the new **Cylinder Adapter**. Re-install the "C" **Retainer Ring** into the base of the **Spindle Bushing** to secure.



Position the Cylinder Adapter with its stamped part number facing "up" towards the top of the lock. Secure with its two small screws removed previously.

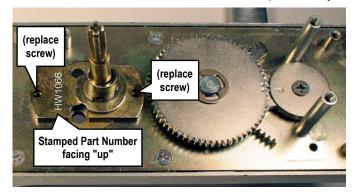

Hint: Before re-installing the **Drive Pin**, prepare and install the new cylinder.


10. Prepare the new cylinder:

Insert the new cylinder into the new **Cylinder Collar**, using as many **Plastic Rings** as necessary to ensure that the face of the cylinder is flush with (or

slightly below) the **Cylinder Collar**. Install the new tailpiece, if needed (see chart). (IC core shown)




Install this cylinder assembly into the front of the lock and secure with its two screws (shown below).

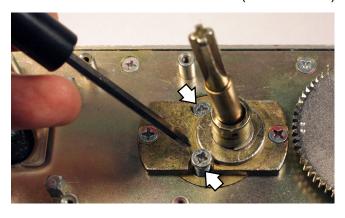


Note: Remember, the **Cylinder Collar** should be snug, but remain free to turn (its ability to turn is a security feature). If necessary, use a **Wave Washer** to ensure the **Cylinder Collar** is not wobbly or rattling.


11. Re-install the **Drive Pin** into the **Spindle Bushing**.

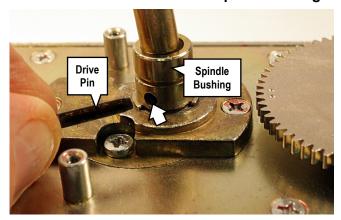

12. Before installing the **Spindle Sector Gear**, be sure the two dots on the **Idle Gear** and the arrow on the **Handle Gear Driver** are precisely aligned as shown in the photo shown below. If mis-aligned, simply remove the "C" retainer ring on the **Idle Gear** and re-align the gear teeth.


Re-install the **Spindle Sector Gear**. The gear tooth with the arrow must be placed between the two dots on the **Idle Gear**. The arrows and dots on all gears must align as shown at right.

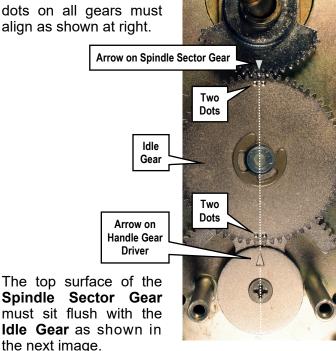

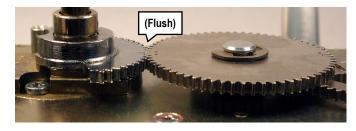

After the gear teeth are aligned and meshed, gently tap with a small hammer, if necessary, until flush.

13. Re-install the **Slide Plate** (with its 2 springs).

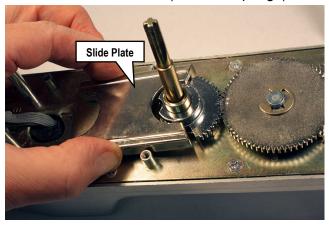

14. Re-install and secure the **Cover Plate** and the **Frame Spacer** (see exploded view illustration and steps 2 and 1) using the screws removed earlier.