

# Diagnosis Test Results :

## Possibility 1 ▶ Status: OK




No actual or stored errors stored in the specific control unit.

## Possibility 2 ▶ Status: Error



Errors stored in the error memory.

## Possibility 3 ▶ Status: No Communication

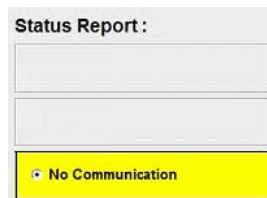

Verify if the specific control unit is build in into the car. Otherwise verify the cable connection to the computer and to the car. Also verify the battery power of the vehicle.

The control unit information is displayed, when the status is either OK or if there is an Error Stored.

# Carsoft MB Ultimate Pro

**Status Report :**

OK

---

Carsoft MB Ultimate Pro 1.0

Date : 04.03.2008 14:29:49

Status: OK

---

**ECU Info :**






 




Part Number

Software Version

Hardware Version

Diagnosis Recognition

Supplier

 Back	 Main	 Print	 Save	 Scan	 Erase Codes	 WD	 No Com.	 Help	 Exit
--	--	---	--	--	---	--	---	--	--

04.03.2008 14:30 Private Vehicles \ E Class \ Single Diagnosis \ Driveline \ CDI Engine \ Error Codes \

## Error Codes:

**Tip :** All control units have stored errors. Some control units have actual errors.

- ▶ Click the **PRINT** button to, you have the opportunity to print the diagnosis result.
- ▶ Click the **SAVE** button to, you have the opportunity to save the diagnosis result.
- ▶ Click the **CIS** button to start the Carsoft information system.

## ► Menu Buttons (1/2) :



**Back** ► To return to the previous screen



**Main** ► To return to the Main Menu



**Start** ► To start the total diagnosis



**Help** ► Help file



**Scan** ► To start scanning the error memory



**Erase Codes** ► To erase the error codes



**No Com.** ► No Communication with the vehicle

► **Menu Buttons (2/2) :**



**Save** ► To save the data to disk



**Print** ► To print the data on paper



**Exit** ► To exit the program

## ► CONTROL UNIT ABRIVIATIO

<b>German</b>	<b>English</b>	<b>Description</b>
<b>AB</b>	<b>AB</b>	Airbag Control Unit
<b>ABS</b>	<b>ABS</b>	ABS Control Unit
<b>AIRCO</b>	<b>AIRCO</b>	Air conditioning Control Unit
<b>BAS</b>	<b>BAS</b>	BAS Control Unit
<b>CDI</b>	<b>CDI</b>	Common Rail Diesel Engine Control Unit
<b>EDW</b>	<b>ATA</b>	Anti Theft Alarm Control Unit
<b>EGS</b>	<b>EGS</b>	Electronic Gearbox Control Unit
<b>ERE</b>	<b>DFI</b>	Diesel Engine Control Unit
<b>ESP</b>	<b>ESP</b>	ESP Control Unit
<b>EVE</b>	<b>IFI</b>	Diesel Engine Control Unit
<b>EWM</b>	<b>ESM</b>	Electronic slever Control Unit
<b>FBS</b>	<b>DAS</b>	Drive Authorization Signal Control Unit
<b>HFM</b>	<b>HFM</b>	Petrol Engine Control Unit
<b>KI</b>	<b>IC</b>	Instrument Cluster Control Unit
<b>ME</b>	<b>ME</b>	Petrol Engine Control Unit
<b>PMS</b>	<b>PMS</b>	Petrol Engine Control Unit