

Residual Engine Heat Utilization

With the engine switched off, it is possible to continue heating the interior for a short while.

Air volume and distribution are controlled automatically.

To select:

Turn electronic key in steering lock to position 1 or 0 or remove key.

Press **REST** button.

This function selection will not activate if the battery charge level is insufficient.

To cancel: Press **REST** button.

The system will automatically shut off

- if you turn electronic key in steering lock to position 2,
- after approx. 30 minutes,
- if the battery voltage drops.

Front Center Console Compartment Ventilation

The front center console compartment has its own air outlet.

To open: Push lever down.
To close: Push lever up.

The air volume is dependent on the setting of the

- air volume control
- air distribution control
- air outlets in the dashboard and rear passenger compartment.

The air temperature is about the same than that of the dashboard air outlets. It cannot be regulated separately.

Note:

The compartment can get very warm due to its confined space. When storing heat sensitive objects in the compartment, close the air outlet while heating the passenger compartment.

Also, do not obstruct the air outlet.



Rear Passenger Compartment Adjustable Air Outlet

To open air outlet, rotate wheel (1) upward.

The air outlet is adjustable.

Important!

This vehicle is equipped with an air conditioner system that uses R-134a (HFC: ozone-friendly hydrofluorocarbon) as a refrigerant. Repairs should always be performed by a qualified technician, and refrigerant should be collected in a recovery system for recycling.