


Stop Light

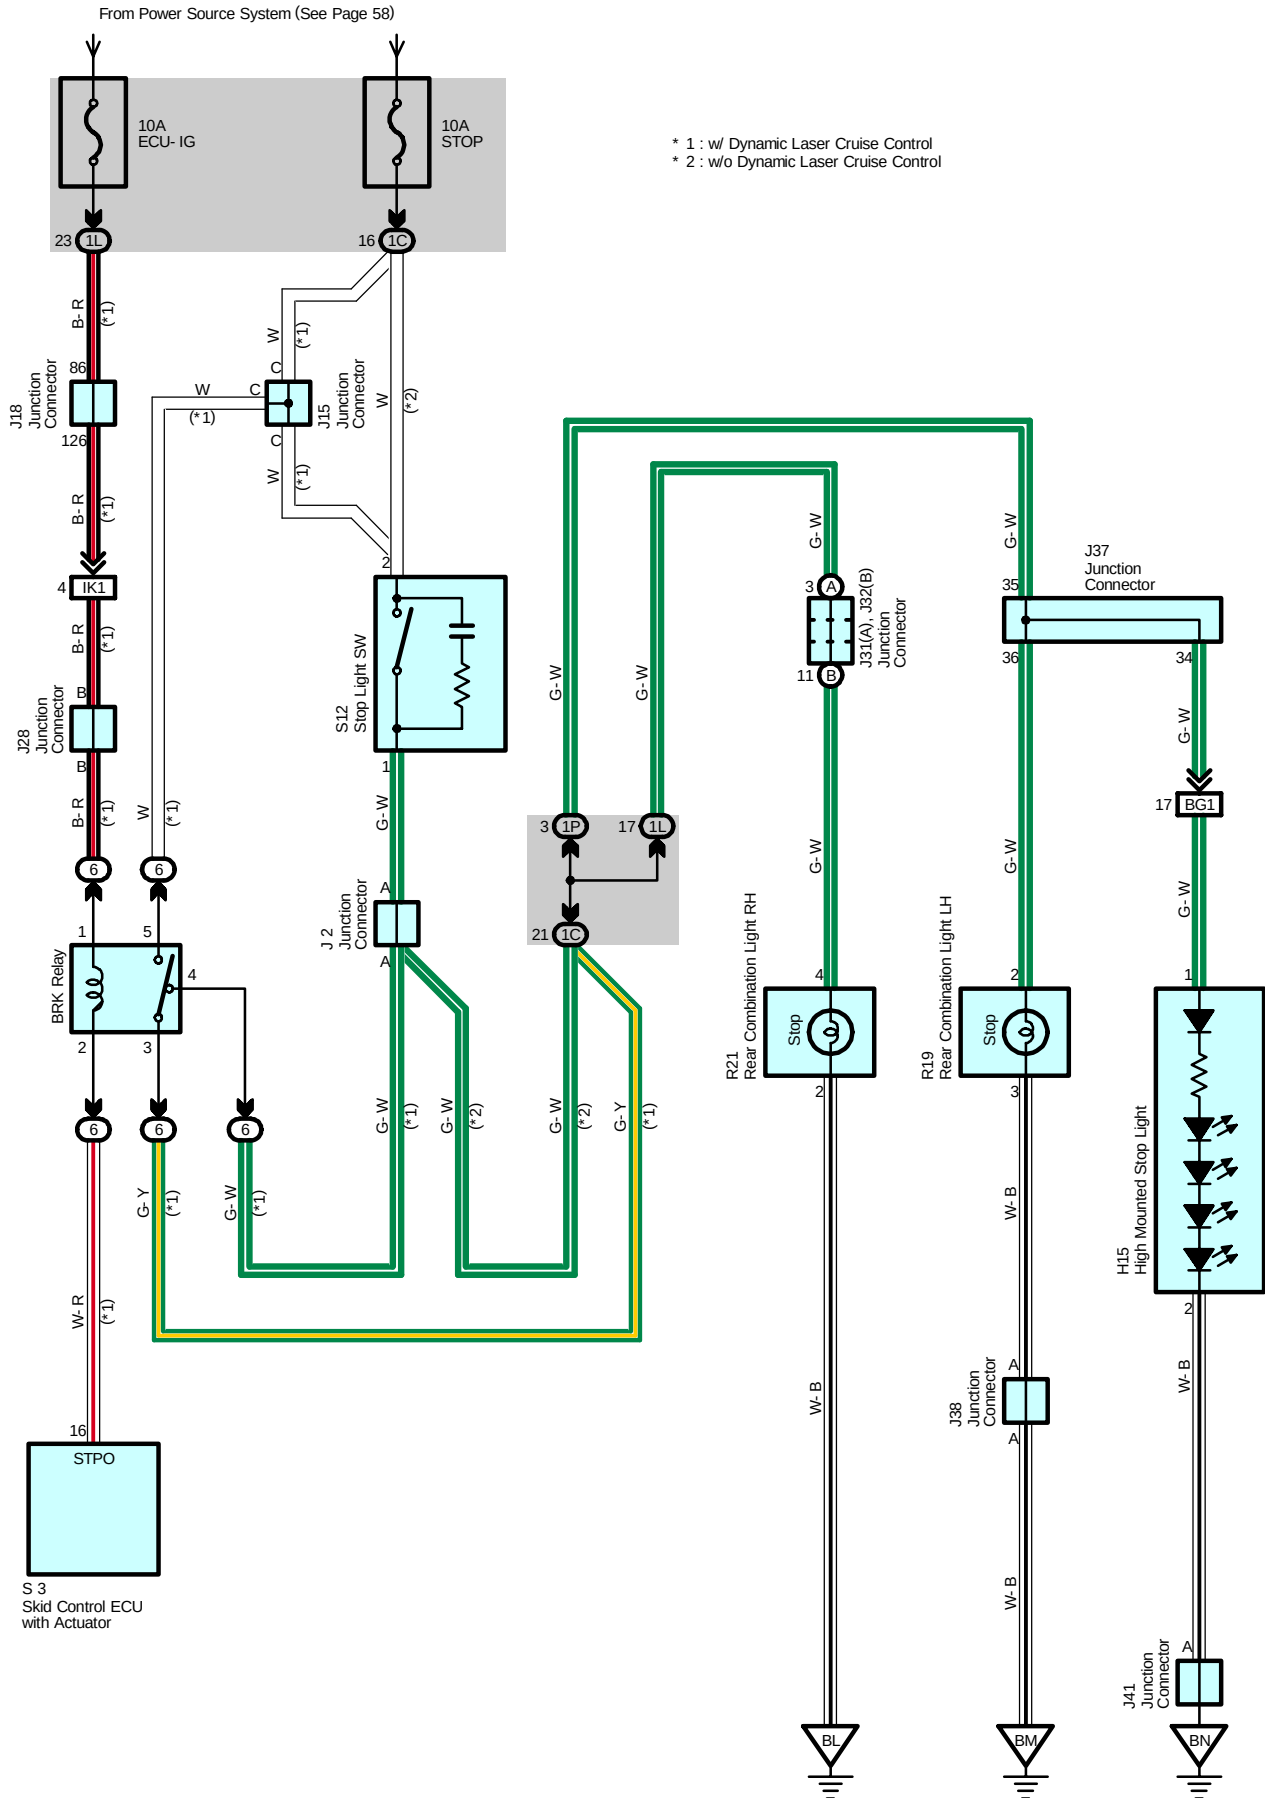

Service Hints

S12 Stop Light SW

2-1 : Closed with brake pedal depressed

: Parts Location

Code	See Page	Code	See Page	Code	See Page
H15	38	J31	A 36	R19	40
J2	33	J32	B 36	R21	40
J15	36	J37	39	S3	33
J18	36	J38	39	S12	37
J28	36	J41	39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
6	25	R/B No.6 (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	27	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1L	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1P	27	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IK1	48	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
BG1	52	Back Door No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
BL	50	Right Rear Quarter Panel
BM	50	Left Rear Quarter Panel
BN	50	Left Side of the Back Door