

Upgrade Guidance For FI8918W

Warning: Please make sure that your camera is FI8918W, not FI8908W. The firmware upgrade is only for FI8918W. If you upgrade this firmware wrongly for other model. Your camera must dead and need send to repair!!

1、 Please check your current firmware version of your camera.

The new software we are going to update is:

System firmware version: 11.22.2.38

Web UI firmware version: 2.4.18.17

Caution:

If you can't confirm the model of your camera, please check the network light, FI8918W has a red power light and a green network light at the back of its base. It also has an audio in and out jack.

Also, you can contact tech@foscam.com to confirm which model you have.

2、 Preparation before upgrading.

Plug the network cable and power for the camera.

Note: Please do not upgrade the camera when it works on wireless.

Plug the network cable and do the upgrade.

3、 Upgrade the system firmware first.

Click the right mouse on the ip in the IP camera tool and choose “**Upgrade Firmware**”. Then you will see the picture below.

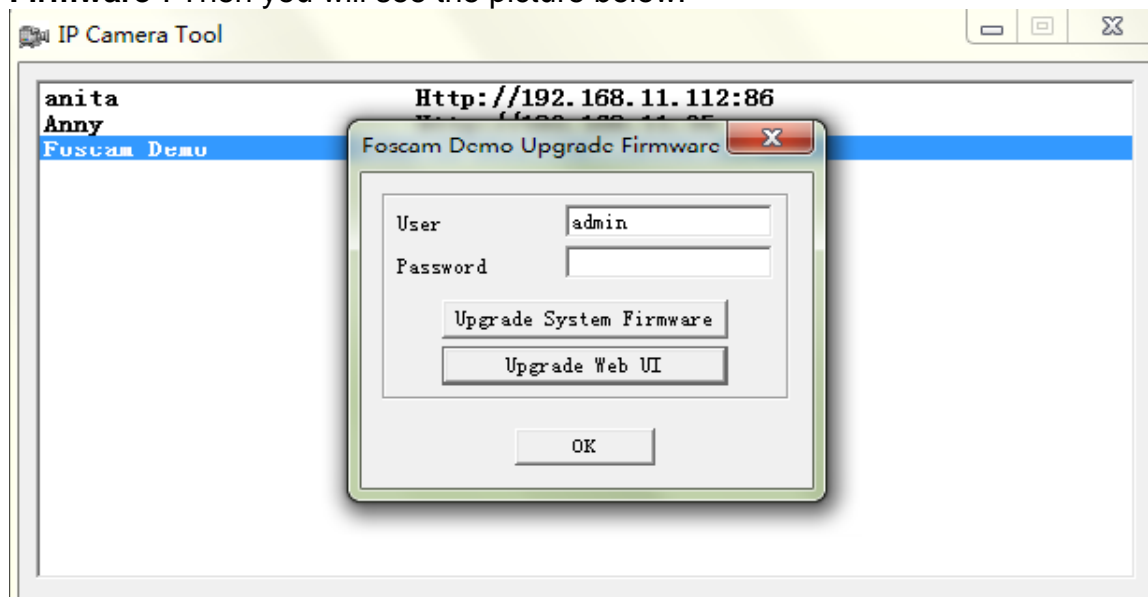


Figure 1.0

Fill in camera's user name and password, click **Upgrade System Firmware**, and then choose **lr_coms_11_22_2_38.bin** to upgrade.

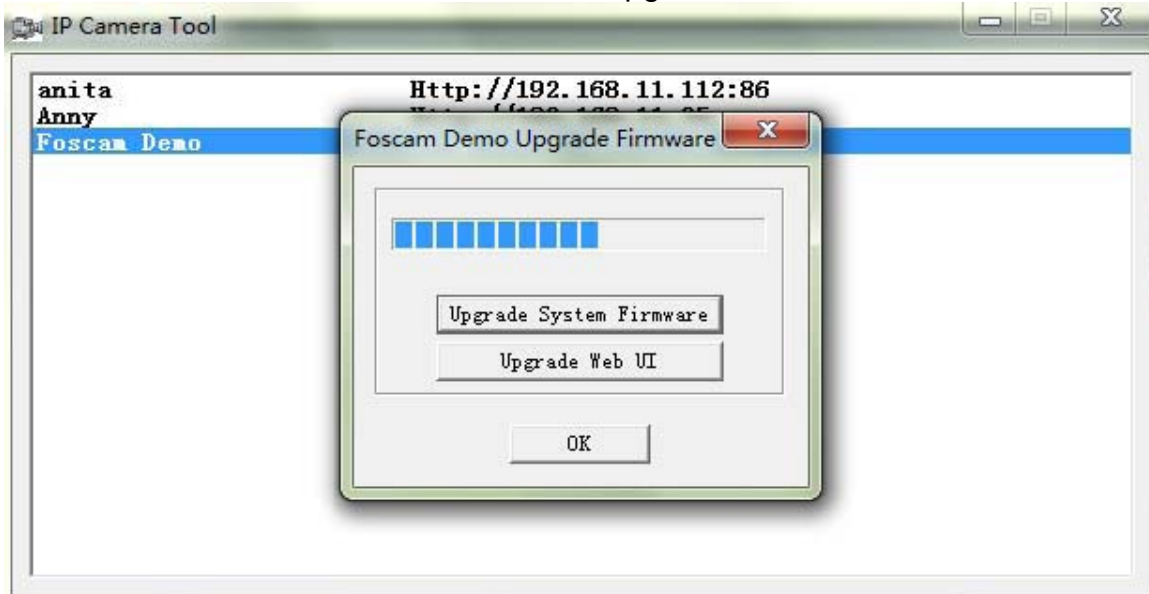


Figure 1.1

Caution: Please don't power off the camera before the IP camera tool find the camera again.

4、Upgrade the Web UI.

Wait about 60 seconds. IP Camera tool will find the camera's IP again. Click right mouse on the IP and choose **Upgrade Firmware**. Choose "**Upgrade Web UI**". (Figure 1.2)

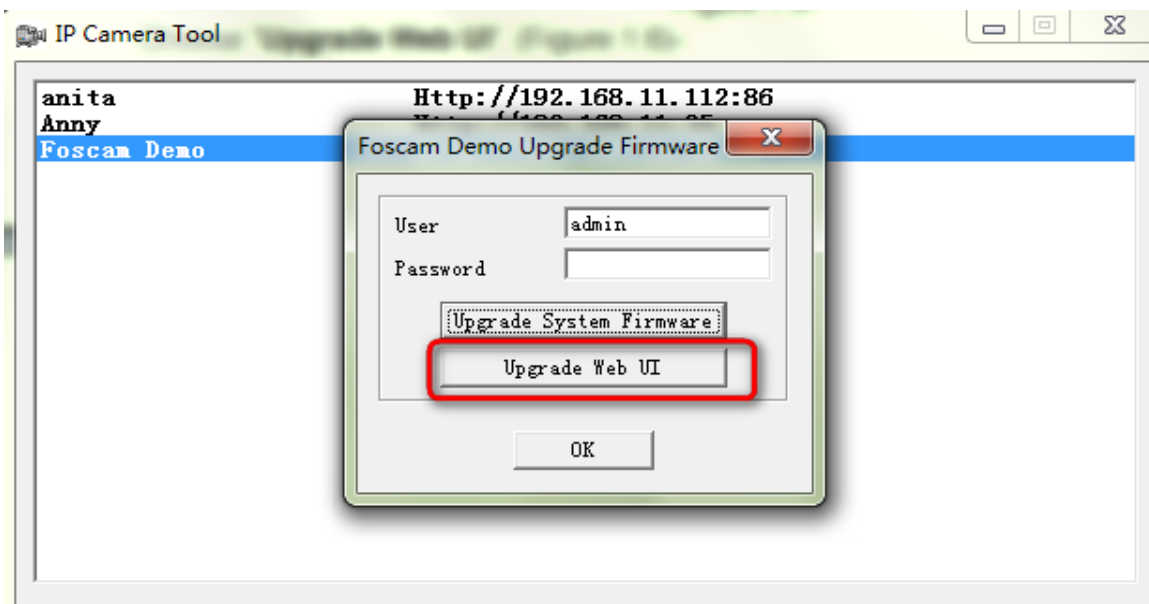


Figure 1.2

Then choose **2.4.18.17.bin** to upgrade.

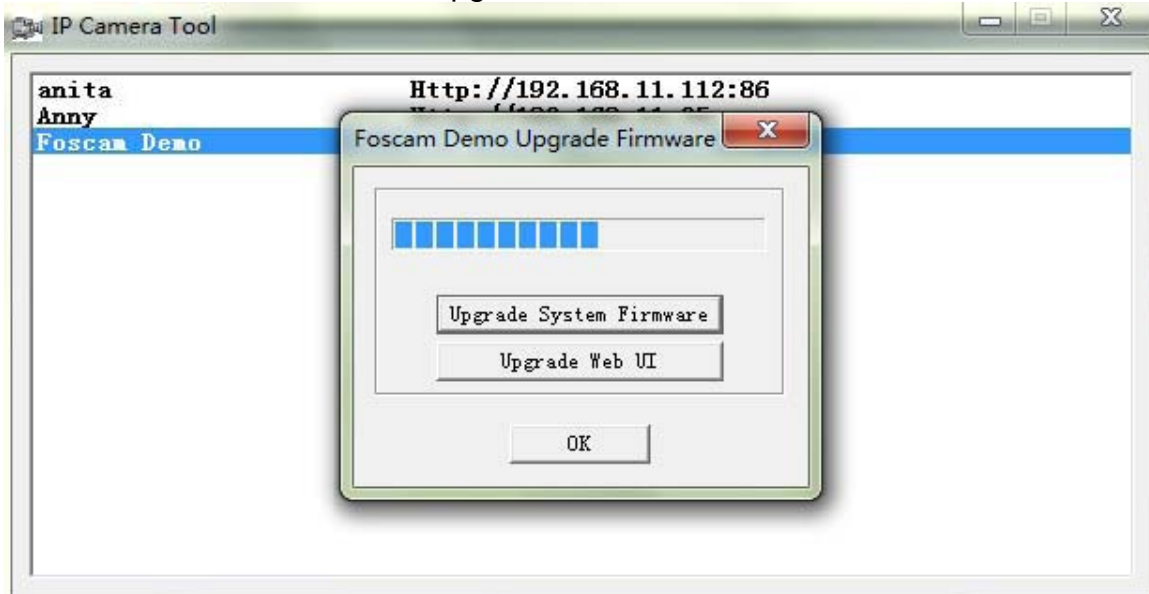


Figure 1.3

Do not shut down the power of the camera during the upgrade.

After you upgrade both the system firmware and Web UI, please check if the upgrade is successful.

Click the right mouse on the ip address and choose **“Basic Properties”**.

Figure 1.4

Or enter the interface (for administrator) and check the Device Info (Figure 1.5).

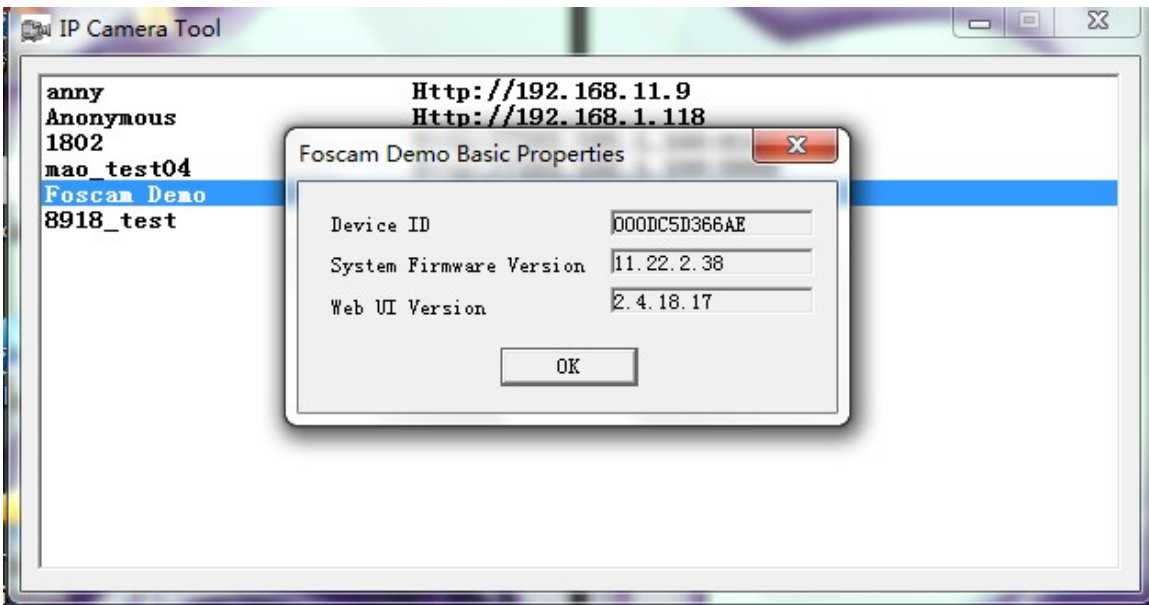


Figure 1.4

Real-time IP Camera Monitoring System																			
<div> Device Info Alias Settings Date&Time Settings Users Settings Multi-Device Settings Basic Network Settings Wireless Lan Settings ADSL Settings UPnP Settings DDNS Service Settings Mail Service Settings MSN Settings FTP Service Settings Alarm Service Settings PTZ Settings Upgrade Device Firmware </div>	<table> <tr> <th colspan="2">Device Status</th></tr> <tr> <td>Device ID</td><td>000DC5D366AE</td></tr> <tr> <td>Device Firmware Version</td><td>11.22.2.38</td></tr> <tr> <td>Device Embedded Web UI Version</td><td>2.4.18.17</td></tr> <tr> <td>Alias</td><td>Foscam Demo</td></tr> <tr> <td>Alarm Status</td><td>None</td></tr> <tr> <td>DDNS Status</td><td>DynDns Succeed http://foscamdemo.dyndns.org:88</td></tr> <tr> <td>UPnP Status</td><td>UPnP Succeed</td></tr> <tr> <td>MSN Status</td><td>No Action</td></tr> </table>	Device Status		Device ID	000DC5D366AE	Device Firmware Version	11.22.2.38	Device Embedded Web UI Version	2.4.18.17	Alias	Foscam Demo	Alarm Status	None	DDNS Status	DynDns Succeed http://foscamdemo.dyndns.org:88	UPnP Status	UPnP Succeed	MSN Status	No Action
Device Status																			
Device ID	000DC5D366AE																		
Device Firmware Version	11.22.2.38																		
Device Embedded Web UI Version	2.4.18.17																		
Alias	Foscam Demo																		
Alarm Status	None																		
DDNS Status	DynDns Succeed http://foscamdemo.dyndns.org:88																		
UPnP Status	UPnP Succeed																		
MSN Status	No Action																		

Figure 1.5