SUPPLEMENTARY INFORMATION

BASIC DIFFERENCES BETWEEN Onan


MODEL 4.0 BF-IR/9000 and MODEL 4.0 BF-IR/9500 (POWER DRAWER)

| OPERATION | SAME AS COVERED IN 965-0315 |
|-----------|--|
| PARTS | SAME AS COVERED IN 965-0315 EXCEPT AS INDICATED HEREIN |
| SERVICE | USE #965-0515 SERVICE MANUAL |



http://stores.ebay.com/UsefulCDs



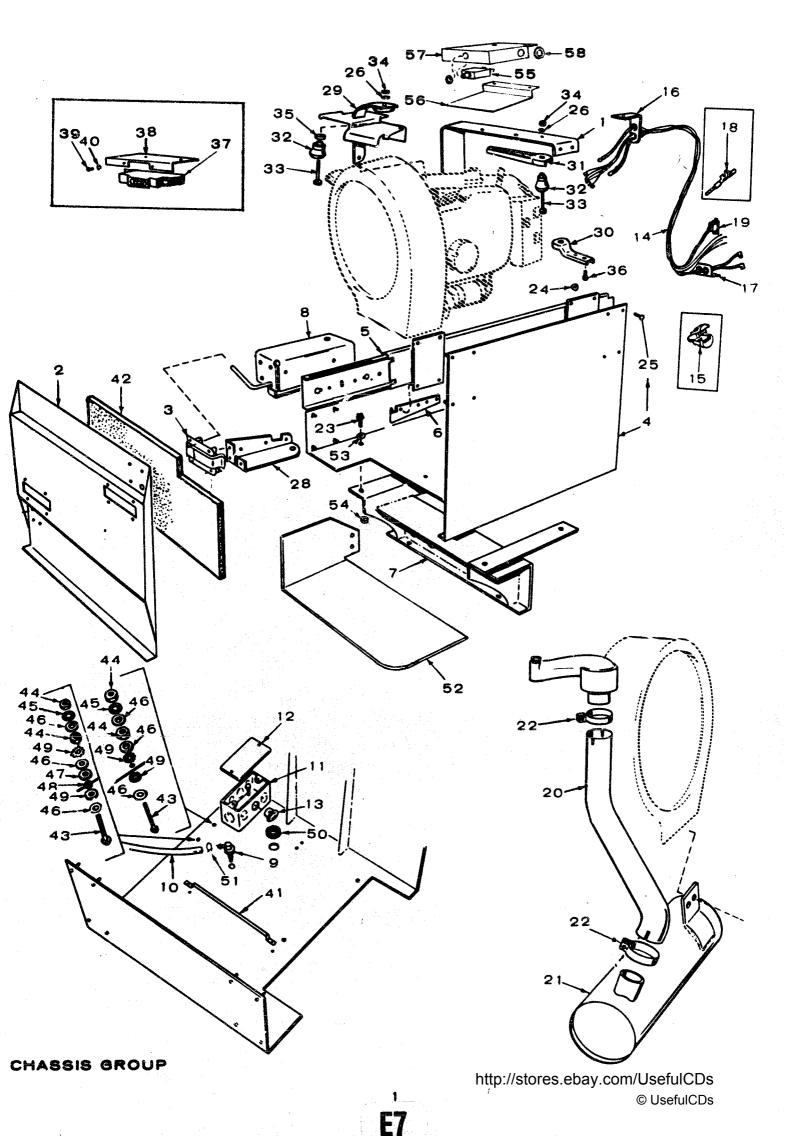

CHASSIS GROUP


| REF. NO. | PART NO. | QTY. USED | PART DESCRIPTION |
|----------|----------------|----------------------|---|
| 1 | 405-2001 | 1 | Yoke, Generator Support |
| 2 | 405-1997 | 1 | Door, Slide Out |
| 3 | 406-0369 | 2 | Latch, Door |
| 4 | 405-1999 | 1 | Pan, Mounting Base |
| 5 | 405-2000 | 2 | Slide |
| 6 | 405-1998 | . 2 | Bracket, Latch Strike |
| 7 | BRACKET, SET M | OUNTING | • |
| | 405-2004 | 1 | Spec A and B |
| | 405-2205 | 1 | Begin Spec C |
| 8 | 405-1950 | 1 | Bracket and Catch Assembly |
| | | | Safety |
| 9 | 502-0419 | 1 | Connector Elbow - Fuel Line |
| 10 | HOSE, FUEL | | |
| | 503-0673 | 1 | Spec A Only |
| | 503-0715 | · 1 | Begin Spec B |
| 11 | 330-0077 | 1 | Box, Junction |
| 12 | 330-0004 | 1 | Cover, Junction Box |
| 13 | 331-0027 | 1 | Clamp, Junction Box |
| 14 | HARNESS, WIRIN | IG - CHASSIS | |
| | 338-0702 | 1 | Spec A Only |
| | 338-0751 | 1 | Begin Spec B |
| 15 | 508-0179 | 4 | Relief, Strain (Part of Wiring Harness) |
| 16 | 301-3612 | 1 | Bracket, Harness Mounting (Part of Wiring Harness) |
| 17 | 301-3613 | 1 | Bracket, Harness Mounting (Part of Wiring Harness) |
| 18 | 332-1546 | 4 | Contact, Connector (Part of Wiring Harness) |
| 19 | 332-1545 | 1 | Body, Connector (Part of |
| | | | Wiring Harness) |
| 20 | 155-1248 | 1 | Tube, Exhaust |
| 21 | 155-1247 | 1 | Muffler, Exhaust |
| 22 | 155-1244 | 2 | Clamp, Exhaust |
| 23 | 800-0050 | 4 | Screw (3/8-16 x 1") - Self |
| | | | Locking - Set Mounting Bracket to Base Pan |
| 24 | 870-0212 | 16 | Nut $(1/4-20)$ - Self Locking |
| 25 | 815-0372 | 16 | Screw, Press (1/4-20 x 5/8") |
| 26 | 850-0050 | 4 | Washer, Lock - Generator Support Mounting (3/8") |
| 28 | 405-1958 | 1 | Bracket, Engine End - Left Side |
| 29 | 403-1019 | | Foot Assembly, Engine Mounting Right Side |
| 30 | 232-2363 | 1 | Support Generator - Left Side |
| 31 | 232-2364 | 1 | Support Generator - Right Side |
| 32 | 402-0283 | · · · · · · 4 | Cushion, Mount |
| 33 | 402-0412 | 4 | Bolt, Cushion Mounting |
| 34 | 870-0281 | 4 | Nut, Self Locking - Cushion Mounting |
| 35 | 402-0413 | 1 | Spacer, Cushion Mounting - Engine End - Right Side |

http://stores.ebay.com/UsefulCDs © UsefulCDs

CHASSIS GROUP (Continued)


| REF. NO. | PART NO. | QTY. USED | PART DESCRIPTION |
|----------|----------------------|-----------|---|
| | | • | |
| 36 | 800-0051 | 4 | Screw, Hex Cap - Generator Support (3/8-16 x 1-1/4") |
| 37 | 320-0153 | 1 | Breaker, Circuit - Spec A and B (See Note *) |
| 38 | 405-2003 | 1 | Bracket, Circuit Breaker Mounting - Spec A and B |
| 39 | 812-0059 | 2 | Screw, Round Head - Circuit Breaker Mounting (#6-32 x 1/4") - Spec A and B |
| 40 | 850-0020 | 2 | Washer, Lock - Circuit Breaker Mounting (#6) - Spec A and B |
| 41 | 405-2007 | 1 | Bracket, Fuel Line Return |
| 42 | 405-2079 | 1 | Insulation, Door |
| 43 | 810-0181 | 2 | Screw, Round Head Brass - Battery Cable Terminal (5/16-18 x 1-1/4") |
| 44 | 871-0025 | 4 | Nut, Hex Brass - Battery Cable Terminals (5/16-18) |
| 45 | 854-0017 | 2 | Washer, Internal Shakeproof - Battery Cable Terminals (5/16") |
| 46 | 526-0054 | 7 | Washer, Flat - Battery Cable Terminals (5/16") |
| 47 | 508-0019 | 1 | Washer, Fibre - Battery Cable Terminals (5/16") |
| 48 | 508-0181 | 1 | Washer, Fibre - Battery Cable Terminals (5/16") |
| 49 | 856-0008 | 4 | Washer, External - Internal Shakeproof, Battery Cable Terminals (5/16") |
| 50 | GROMMET | • | |
| | 508-0060 508-0180 | 1 1 | Battery Cable Through Pan Harness Bracket (Part of Wiring |
| | | | Harness) |
| 51 | 503-0685 | 2 | Clamp, Fuel Line |
| 52 | 405-2113 | 1 | Guard, Mud |
| 53 | 526-0013 | 4 | Washer (3/8") |
| 54 | 870-0281 | 4 | Nut (3/8-16) |
| 55 | 320-0547 | 1 | Breaker, Circuit - Begin Spec C |
| 56 | 301-3734 | 1 | Box, Circuit Breaker - Begin Spec C |
| 57 | 301-3735 | <u>.</u> | Cover, Circuit Breaker Box - Begin Spec C |
| 58 | 508-0068 | 2 | Grommet, Circuit Breaker Box - Begin Spec C |
| | | | 9-m ahaa a |

^{* -} NOTE: Old type circuit breaker used on Spec A and B can be replaced with the new type circuit breaker. To do so order Part No. 320-0569 Circuit Breaker Replacement Kit, including breaker, box, cover, etc.

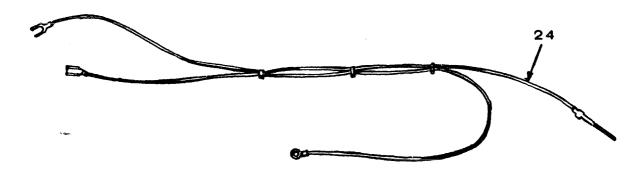

GOVERNOR, STARTER, CHARGING ALTERNATOR AND BLOWER HOUSING GROUP


| REF. NO. | PART NO. QT | Y. USED | PART DESCRIPTION |
|----------|---------------------|------------|------------------------------|
| 11 | STATOR, CHARGING AL | TERNATOR | |
| | 191-0931 | 1 | Spec A Only |
| | 191-1073 | 1 | Begin Spec B |
| 17 | 134-2837 | 1 . | Cover, Blower Housing Scroll |
| 24 | HARNESS, WIRING - A | ALTERNATOR | • |
| | 338-0709 | 1 | Spec A Only |
| | 338-0752 | 1 | Begin Spec B (Illustrated) |

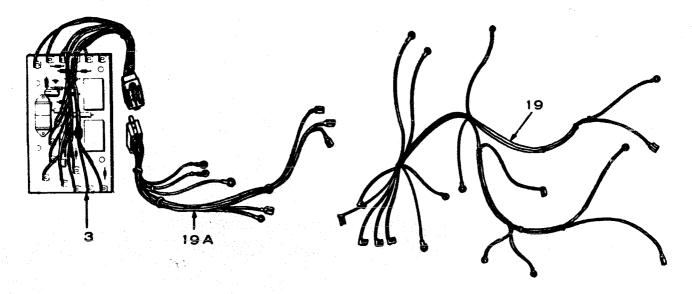


CONTROL GROUP

| REF. NO. | PART NO. QTY. USED | PART DESCRIPTION |
|----------|-----------------------------|---|
| 3 | CONTROL BOARD (INCLUDES PAR | TS MARKED *) |
| | 300-1073 1 | Without Wiring Harness, Spec A Only |
| | 300-1074 1 | With Wiring Harness - Begin Spec B (Illustrated) |
| 19 | 338-0697 | Harness, Wiring - Control to Engine - Spec A Only |
| 19A | 338-0753 1 | Harness, Wiring - Control to Engine - Begin Spec B |

http://stores.ebay.com/UsefulCDs

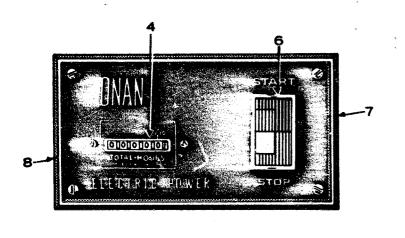

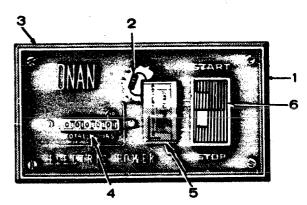

REMOTE CONTROL GROUP - OPTIONAL EQUIPMENT

| REF. NO. | PART NO. | QTY. USED | PART DESCRIPTION |
|----------|----------|-----------|---|
| 1 | 300-0986 | 1 | Control Assembly, Deluxe Remote (Includes Parts Marked *) |
| 2 | 359-0008 | . 1 | *Diode, Zener |
| 3 | 301-3606 | 1 | *Panel, Control |
| 4 | 302-0885 | 1 | +*Meter, Running Time |
| 5 | 302-0888 | . 1 | *Meter, Battery Voltage |
| 6 | 308-0341 | 1 | +*Switch, Rocker |
| 7 | 300-1131 | 1 | Control Assembly, Deluxe Remote (Includes Parts Marked +) |
| 8 | 301-3776 | · 1 | +Panel, Control |

OIL SYSTEM GROUP

| REF. NO. | PART NO. | QTY. USED | PART DESCRIPTION |
|----------|---------------|---------------------------------------|------------------|
| 1 | CAP AND INDIC | CATOR, OIL FILL | |
| | 123-1164 | 1 | Spec A and B |
| .a.e | 123-1162 | 1 | Begin Spec C |
| 2 | TUBE, OIL FIL | .L | 1 |
| | 123-1208 | 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 | Spec A and B |
| | 123-1179 | 1 | Begin Spec C |

FUEL SYSTEM GROUP

| REF. NO. | PART NO. | QTY. USED | PART DESCRIPTION |
|----------|------------------|----------------|---|
| 1 | 140-1321 | 1 | Adapter, Air Cleaner (Includes Breather Hose Adapter) |
| 9 | 865-0022 | 2 | Nut, Wing - Air Cleaner (One Only used on Spec A and B) |
| 27 | STUD, AIR CLEANE | ER . | ,, |
| | 520-0823 | 1 | Spec A and B |
| | 520-0853 | 1 | Begin Spec C |
| 30 | 861-0008 | . 1 | Nut, Square - Air Cleaner Mtg. (#10-32) - Spec A and B |
| 33 | WASHER, FLAT - A | IR CLEANER MOU | NTING |
| | 526-0008 | 2 | Spec A and B |
| | 526-0012 | 1 | Begin Spec C |
| 35 | 508-0017 | 1 | Washer, Fibre - Air Cleaner Element Mtg Spec A and B |
| 36 | 405-2010 | 1 | Spring, Air Cleaner Element Mounting - Spec A and B |

GENERATOR GROUP

| REF. NO. | PART NO. | QTY. USED | PART DESCRIPTION |
|----------|----------------|-----------|--|
| 9 | 201-1988 | 1 | Armature Assembly, Wound (Includes Bearing and Collector Ring) |
| 12 | 220-1859 | 1 | Frame and Stator, Wound - NOTE: Spec A and B Generator Plants also order 201-1988 Armature Assembly. |
| 17 | REACTOR, COMPO | UNDING | Time out o Addemoty. |
| | 315-0380 | 1 | Spec A and B |
| | 315-0410 | 1 | Begin Spec C |

| SPECIA | | ST FOR MODEL | | | | | · |
|-----------|---------------|--|---------|---------|-----------------|----------------------------------|-----|
| • | | ANDARD PARTS REFE Talog also contains c | | | | | |
| | \. Fall 10 OF | · | G DIAGR | | * | G) 611-1094-01 | |
| ART NO. | QTY. | DESCRIPTION | | ART NO. | QTY. | DESCRIPTION | l |
| | | | | | T | | |
| Mobile Ho | me Power Dra | wer | | | | | |
| Refer To | Supplement 9 | 965–1008 | | | | | |
| | | | | | | | |
| | | | i gari | | | | |
| | | | | | | | |
| | | · | | | | | |
| | | | | | | | |
| | | | | | | | |
| : | | | | | | | |
| • | | | | 1 | (| | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | V | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | , e |
| | | | | | | | |
| | v. | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | March 1 | 1979 - | | h | ttn://etoree el | nav com/l lsefulCDs | : 1 |
| Dated. | March 1, | 1979 Revised | fo Fo | 11 | Pa | gay.com/UsefulCDs © UsefulCDs | · |

F2

| SPECIAL | PARTS LI | ST FOR MODE | L | 4.0BF-1R | | SPEC | 9000B | |
|-------------|------------|-----------------|-----------|----------|-------|-------------|---------------------------|-----------|
| | FOR ST | ANDARD PART | S REFER | TO CATA | LOG_ | 965-0315 | KEY NO | |
| | (PARTS C | ATALOG ALSO CON | | | | , | | ED BELOW) |
| | | | WIRING | DIAGRAM | NO | (ENC | G) 611-1109-01 | |
| PART NO. | QTY. | DESCRIPTIO | N | PAR' | T NO. | QTY. | DESCRIPT | ION |
| | | | | | | | | |
| Mobile Home | Power Dra | wer | | | | | | |
| Refer To Su | pplement 9 | 65-1008 | | | | | | |
| • | | • | | | | | | |
| | | | | | | | | |
| | | | | | | , | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | \ . | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | ٠ | |
| | | | | | | | | |
| | | | | | | | | |
| | | | 3 - | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | • | | | | | | |
| | | | | | | | | |
| | | | a a | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | 1 * * - | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| | | | | | | | | |
| Dated_ | March 1, | 1979 | Revised _ | | htt | p://storese | bay.com/Useful © Usefu | CDs 1 |

| SPECIA | | ST FOR MODEL | | SPEC | 9000C |
|------------|---|--|-------------|---------------|-----------------|
| | | ANDARD PARTS REFER ATALOG ALSO CONTAINS COM | | | |
| | (************************************** | · | DIAGRAM NO. | , | IG) 611–1109–01 |
| | | | | | |
| PART NO. | QTY. | DESCRIPTION | PART NO. | QTY. | DESCRIPTION |
| | | | · | · | |
| Mobile Hom | e Power Drav | wer | | | |
| Refer To S | upplement 9 | 65-1008 | | | |
| | | | | | |
| | | | | | |
| | | , | | | |
| | | | | | |
| | | | · | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | • | | 4 | |
| | | | | | |
| | | | | | ! |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | , | | | | |
| | | | · | · | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | 1 | | |
| Dated. | March 1, | 1979 Revised | ni | up://storesel | © UsefulCDs 1 |

F4

Lead

Grommet

Muffler

Terminal

Button, Dot

1

1

2

1

1

320-0547

301-3734

301-3735

508-0068

332-1381

.517-0034 155-1315 Breaker, Circuit

Box, Circuit Breaker

Cover, Circuit Breaker Box

(PARTS CATALOG ALSO CONTAINS COMPONENTS FOR MAJOR OPTIONAL FEATURES LISTED BELOW)

WIRING DIAGRAM NO. _

| PART NO. | QTY. | DESCRIPTION | PART NO. | QTY. | DESCRIPTION |
|-----------|----------|---|----------|------|--|
| | | | | | |
| NOTE: The | is Is A | Special Motor Home Unit. | | | |
| 123-1179 | 1 | Tube, Oil Fill | | | |
| 123-1162 | 1 | Indicator And Cap, Oil Fill | | | |
| 155–1362 | 1 | Bracket, Spacer - Muffler Mounting | | | |
| 191-1073 | 1 | Stator, Alternator (10 Amp - 12.5 VDC @ 1800 rpm) | ٠. | | |
| 520-0853 | 1 | Stud, Air Cleaner | | | · · · |
| 140-1321 | 1 - | Adapter, Air Cleaner (Includes Breather Hose Adapter) | | | |
| 160-1177 | 1 | Spring, Retainer - Ignition | | | |
| 160-1181 | 1 | Arm, Ignition Breaker | ' | | |
| 160-1180 | 1 | Spring, Point Set Adjust | | | |
| 160-1185 | 1 | Clip, Adjusting Screw Retainer | | | |
| 160-1182 | 1 | Base Assembly, Lever And | | | |
| 312-0196 | 1 | Condenser - Ignition | | | |
| 160-1172 | 1 | Base, Ignition Breaker | • | | • |
| 160-1176 | 1 | Cover, Breaker Box | | | |
| 524-0130 | 3.5 qts. | Oil | | | |
| 403-1180 | 1 | Frame Mounting | | | |
| 320-0547 | 1 | Breaker, Circuit | , | | |
| 301-3734 | 1 | Box, Circuit Breaker | | | |
| 301-3735 | 1 | Cover, Circuit Breaker Box | | | |
| 508-0068 | 2 | Grommet | | | |
| 330-0005 | 1 | Box, Handy | | | |
| 337-0081 | 1 | Strap, Ground | | | |
| 331-0027 | 1 | Clamp | | | e de la companya de l |
| 332-0604 | 1 | Block, Terminal | | • | |
| 332-1834 | . 1 | Marker, Strip - Terminal Block | | | en e |
| 98–2473 | 1 | Label, Control Cover | | | |
| 312-0050 | 1 | Condenser, Ignition | | | |
| | | | | | |