

DTC	P0571/52	BRAKE SWITCH "A" CIRCUIT
-----	----------	--------------------------

CIRCUIT DESCRIPTION

When the brake pedal is depressed, the stop lamp switch assy sends a signal to the ECM. When the ECM receives the signal, it cancels the cruise control.

A fail-safe function is provided so that it functions normally, even if there is a malfunction in the stop lamp signal circuit.


The cancel condition occurs when battery positive voltage is supplied to terminal STP.

When the brake is on, battery positive voltage is normally applied through the STOP fuse and the stop lamp switch assy to terminal STP of the ECM, and the ECM turns the cruise control OFF.

If the harness connected to terminal STP has an open circuit, terminal STP will have battery positive voltage and the cruise control will be turned OFF.

DTC No.	DTC Detection Condition	Trouble Area
P0571/52	The malfunction code is output when the voltage of the STP terminal and that of the ST1- terminal on the ECM are less than 1 V for 0.5 sec. or more.	• Stop lamp switch assy • Stop lamp switch assy circuit • ECM

WIRING DIAGRAM

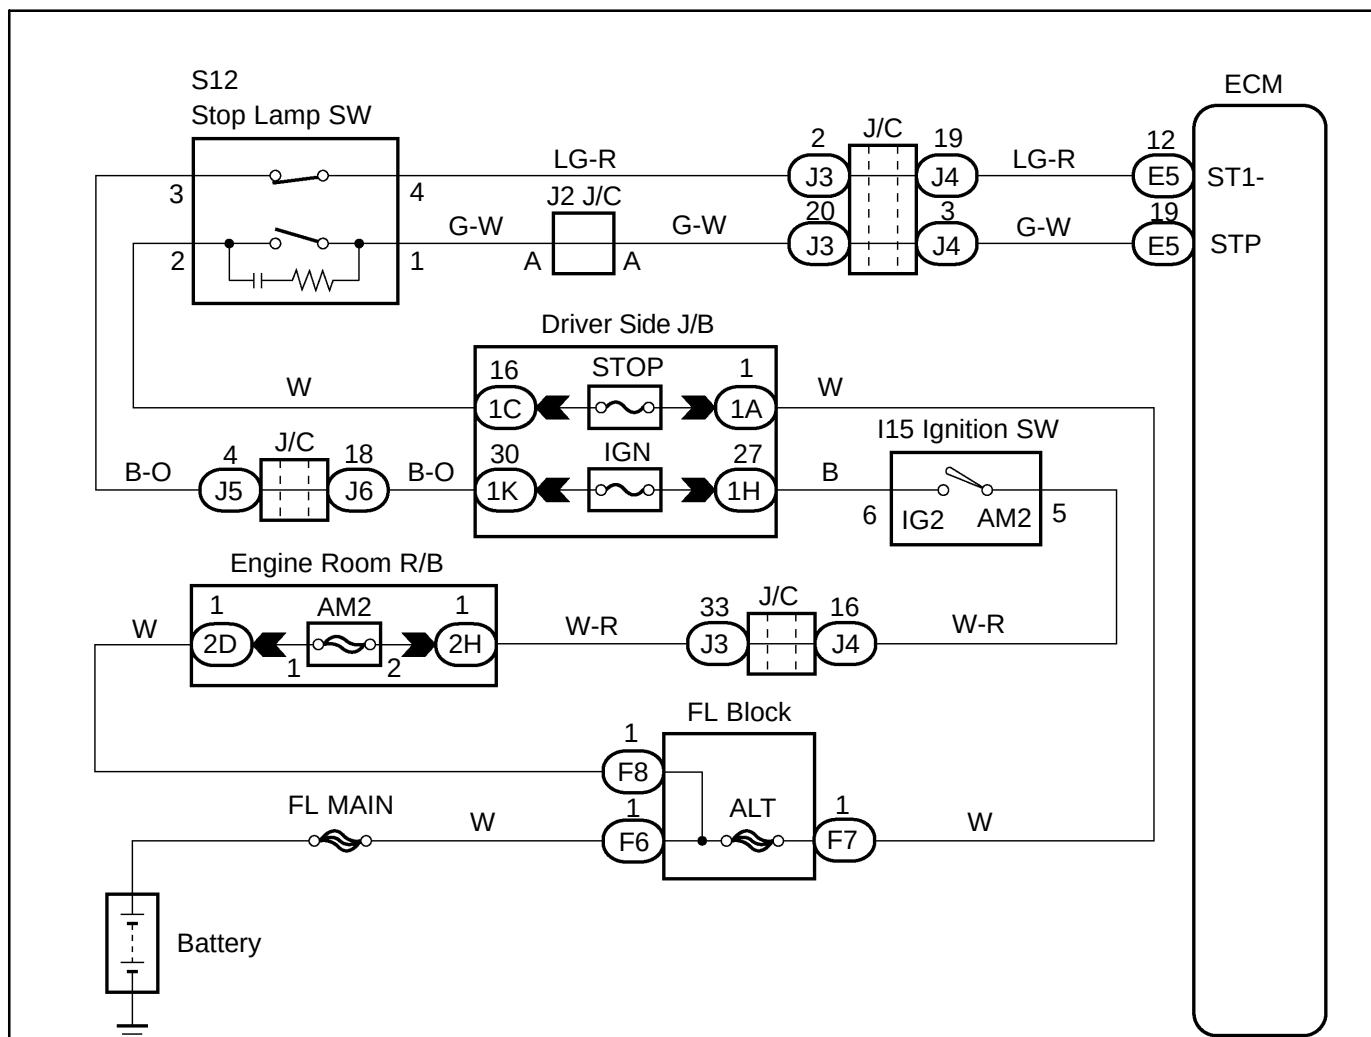

INSPECTION PROCEDURE

1 INSPECT STOP LAMP SWITCH OPERATION


- (a) Check that the stop lamp lights up when brake pedal is depressed and turns OFF when the brake pedal is released.

NG

INSPECT STOP LAMP SWITCH CIRCUIT (See page 05-496)

OK

2 INSPECT STOP LAMP SWITCH ASSY

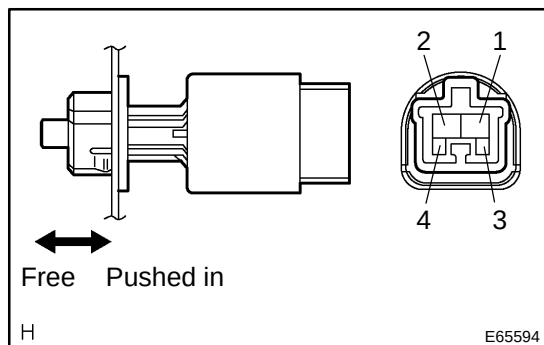

- (a) Disconnect the stop lamp switch assy connector.
(b) Measure the continuity between each terminal of the stop lamp switch assy.

Standard:


Switch condition	Tester connection	Specification
Switch pin free	1 - 2	Continuity
Switch pin free	3 - 4	No continuity
Switch pin pushed in	1 - 2	No continuity
Switch pin pushed in	3 - 4	Continuity

NG

REPLACE STOP LAMP SWITCH ASSY

OK


3 INSPECT ECM

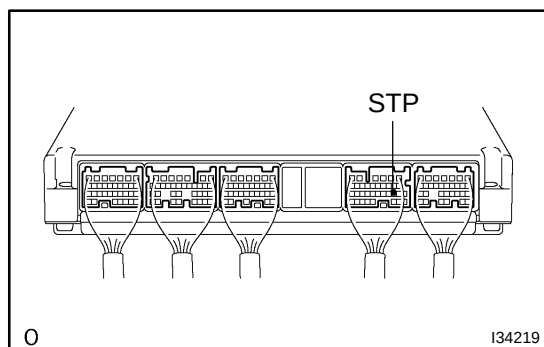

- (a) Remove the ECM with connectors.
(b) Turn the ignition switch ON.
(c) Measure voltage between terminal STP of ECM connector and body ground when the brake pedal is depressed and released.

Standard:

Pedal condition	Voltage (V)
Depressed	10 to 14
Released	Below 1

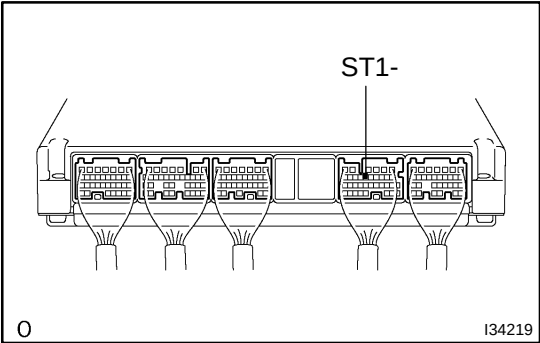

- (d) Measure voltage between terminal ST1- of ECM connector and body ground when the brake pedal is depressed and released.

Standard:

Pedal condition	Voltage (V)
Depressed	Below 1
Released	10 to 14

NG

REPLACE ECM (See page 01-37)

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR